


24 LITRE VIVARO BRACKETS

FITTING INSTRUCTIONS



**FRONT
BRACKET**

**REAR
BRACKET**

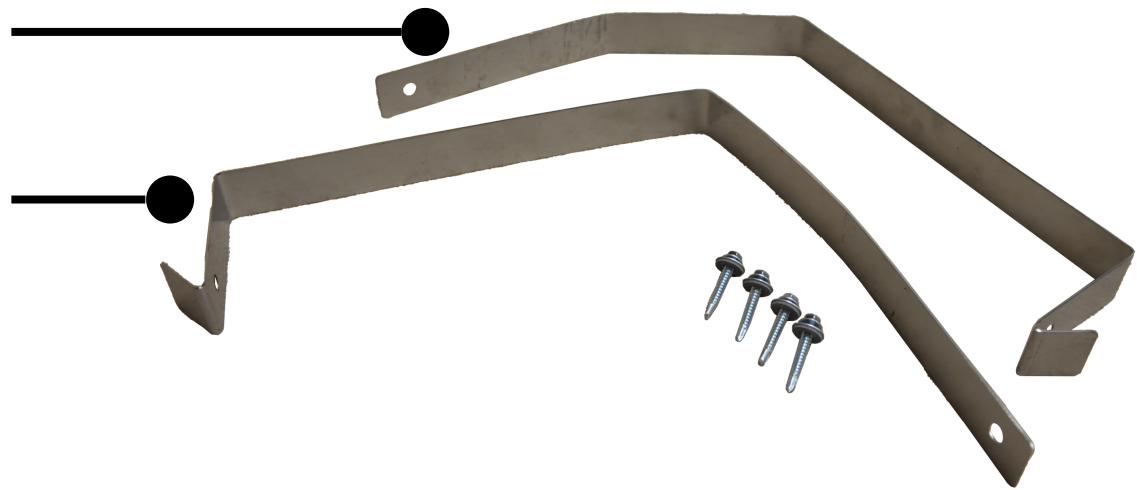

KIT CONTENTS

- 1X STAINLESS STEEL FRONT BRACKET
- 1X STAINLESS STEEL REAR BRACKET
- 4X SELF TAPPER SCREWS

YOU WILL NEED

- DRILL

For more information on fitting these brackets please refer to our instructional video on Youtube. Simply scan the QR code on this page to take you there.

1. Remove the caps in the side of the chassis.

Location for fitting brackets (closest to external side)



2. Fit the hook side of each bracket into the existing holes in the chassis. The bracket labelled front will always go the front of the van, regardless of whether it is being fitted on the drivers or passenger side.

Brackets in place



3. Secure both brackets on one side with self tapper screws, using the side closest to the external of the van. (One screw per bracket).
4. Put the tank into position (you may need something to prop the tank up in position).
5. Using the remaining self tapper screws fix the unmounted side of the bracket to the chassis, making sure the brackets are fitted tightly around the tank. (One screw per bracket).